AUTOMATIK 9015, 821A, 8255, 8217, 8205



Bedienungsanleitung / User's Manual

 


JUNKERS UHREN KOLLEKTIONEN

DE. Junkers-Uhren begeistern durch den historischen Bezug zu den legendären Wellblech-Fliegern. Sie lassen eine spannende Epoche der Flugzeuggeschichte wieder lebendig werden und stehen wie ihr berühmtes Vorbild für Robustheit, Langlebigkeit und markantes Design. Jeder Blick auf eine JUNKERS-Uhr vermittelt erneut die Faszination des Fliegens.



EN. Since Junkers watches refer to the legendary corrugated sheet aircrafs, they also fill with enthusiasm. They bring a thrilling era of aircraft history alive and like their role model they represent robustness, persistence and significant design. Every glance at a Junkers watch shows the fascination of flying again.




Date adjustment:

Pull out the crown till position 1 and adjust the date by turning it clockwise, then push the crown back into its neutral position [N].

Time adjustment:

Pull out the crown at position 2 and adjust the time by turning it counter-clockwise, then push the crown back into its neutral position [N].

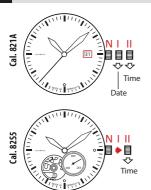


Date adjustment:

(version with date) Pull out the crown till position 1 and adjust the date by turning it counter-clockwise, then push the crown back into its neutral position [N].

Time adjustment:

Pull out the crown at position 2 and adjust the time by turning it counterclockwise, then push the crown back into its neutral position [N].

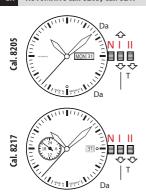

Time adjustment: Pull out the crown at position 2 and adjust the time by turning it counter-clockwise, then push the crown back into its neutral position [N]. Date adjustment: Pull out the crown till position 1 and adjust the date by turning it counter-clockwise, then push the crown back into its neutral position [N]. Weekday adjustment: Adjust the day by rotating the crown clockwise in 1 position.

24- Hour display: shows time in 24 hour steps.

NOTE: When the watch is stopped - i.e. no longer ticking (hand for power reserve points to MIN) - it must be wound before wearing (approximately 15 turns clockwise in neutral position [N]). The remaining winding process of the automatic watch results from normal arm movement during wearing.

Please do not wear your watch while swimming in seawater. Saltwater destroys gaskets and insulation of glass, encasement and crown. If your watch should come into contact with seawater, please rinse it immediately with clear fresh water. You should check the functionality of the gasket twice a year regularly.

For additional useful information, visit www.pointtec.de

Bitte wenden Sie sich für Reparaturen und bei Garantieansprüchen an die Verkaufsstelle. In case your watch needs to be repaired or to raise claims under a guarantee, please contact the point of sales.



Herstellung: POINT tec Electronic GmbH Steinheilstraße 6 85737 Ismaning/München Fax +49 (0)89 96 32 17 www.pointtec.de